




411 West Congress St., Maple Lake, MN 55358 / 1-877-466-8837 / www.wavearmor.net

Attaching Dock Ramp Kit #21934 to Dock Section-Kit #21950.

1. Insert dock hinge into the channel on the dock section by sliding it in from the end until the threaded insert lines up with hole on top. Secure with the 3/8 x 1 1/2 bolt.



2. Slide the dock ramp into the top opening of the dock hinge. Insert the second dock hinge into the dock channel on the other side and secure from the top with the 3/8 x 1 1/2 bolt.

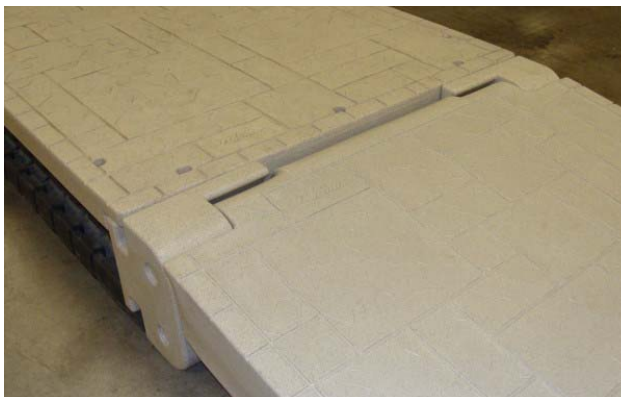

3. The final step is to attach the shoulder bolts to the dock hinge and the dock ramp.

